

AGROSAL d.o.o.



AS 56A-62A



AGROSAL d.o.o.

Gregorčičeva ulica 38, 5270 Ajdovščina
telefon: 05 368 90 96, fax: 05 368 90 97
e-mail: info@agrosal.si, www.agrosal.si

GENUINE SPARE PARTS

AS 56A-62A
Model Year 2011/2012

- Use GLOBAL GARDEN PRODUCT Genuine Spare Parts specified in the parts list for repair and/or replacement.
- The contents described in the parts list may change due to improvement.
- The drawings of the spare parts are only indicative and might not represent the part in question exactly.
- The indications "right" - "left" - "front" - "rear" refer to the position of the operator when using the machine.
- When placing orders of parts for repair and/or replacement, make sure that the illustrated parts list is the one applying to the machine's year of manufacture, as shown on the identification plate attached to the machine.

COPYRIGHT by GLOBAL GARDEN PRODUCTS

All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from GLOBAL GARDEN PRODUCTS.

...THINKING GREEN



AGROSAL d.o.o.

AGROSAL


AGROSAL d.o.o.

AG

AGROSAL d.o.o.

OSAL d.o.o.

AGROSAL d.o.o.

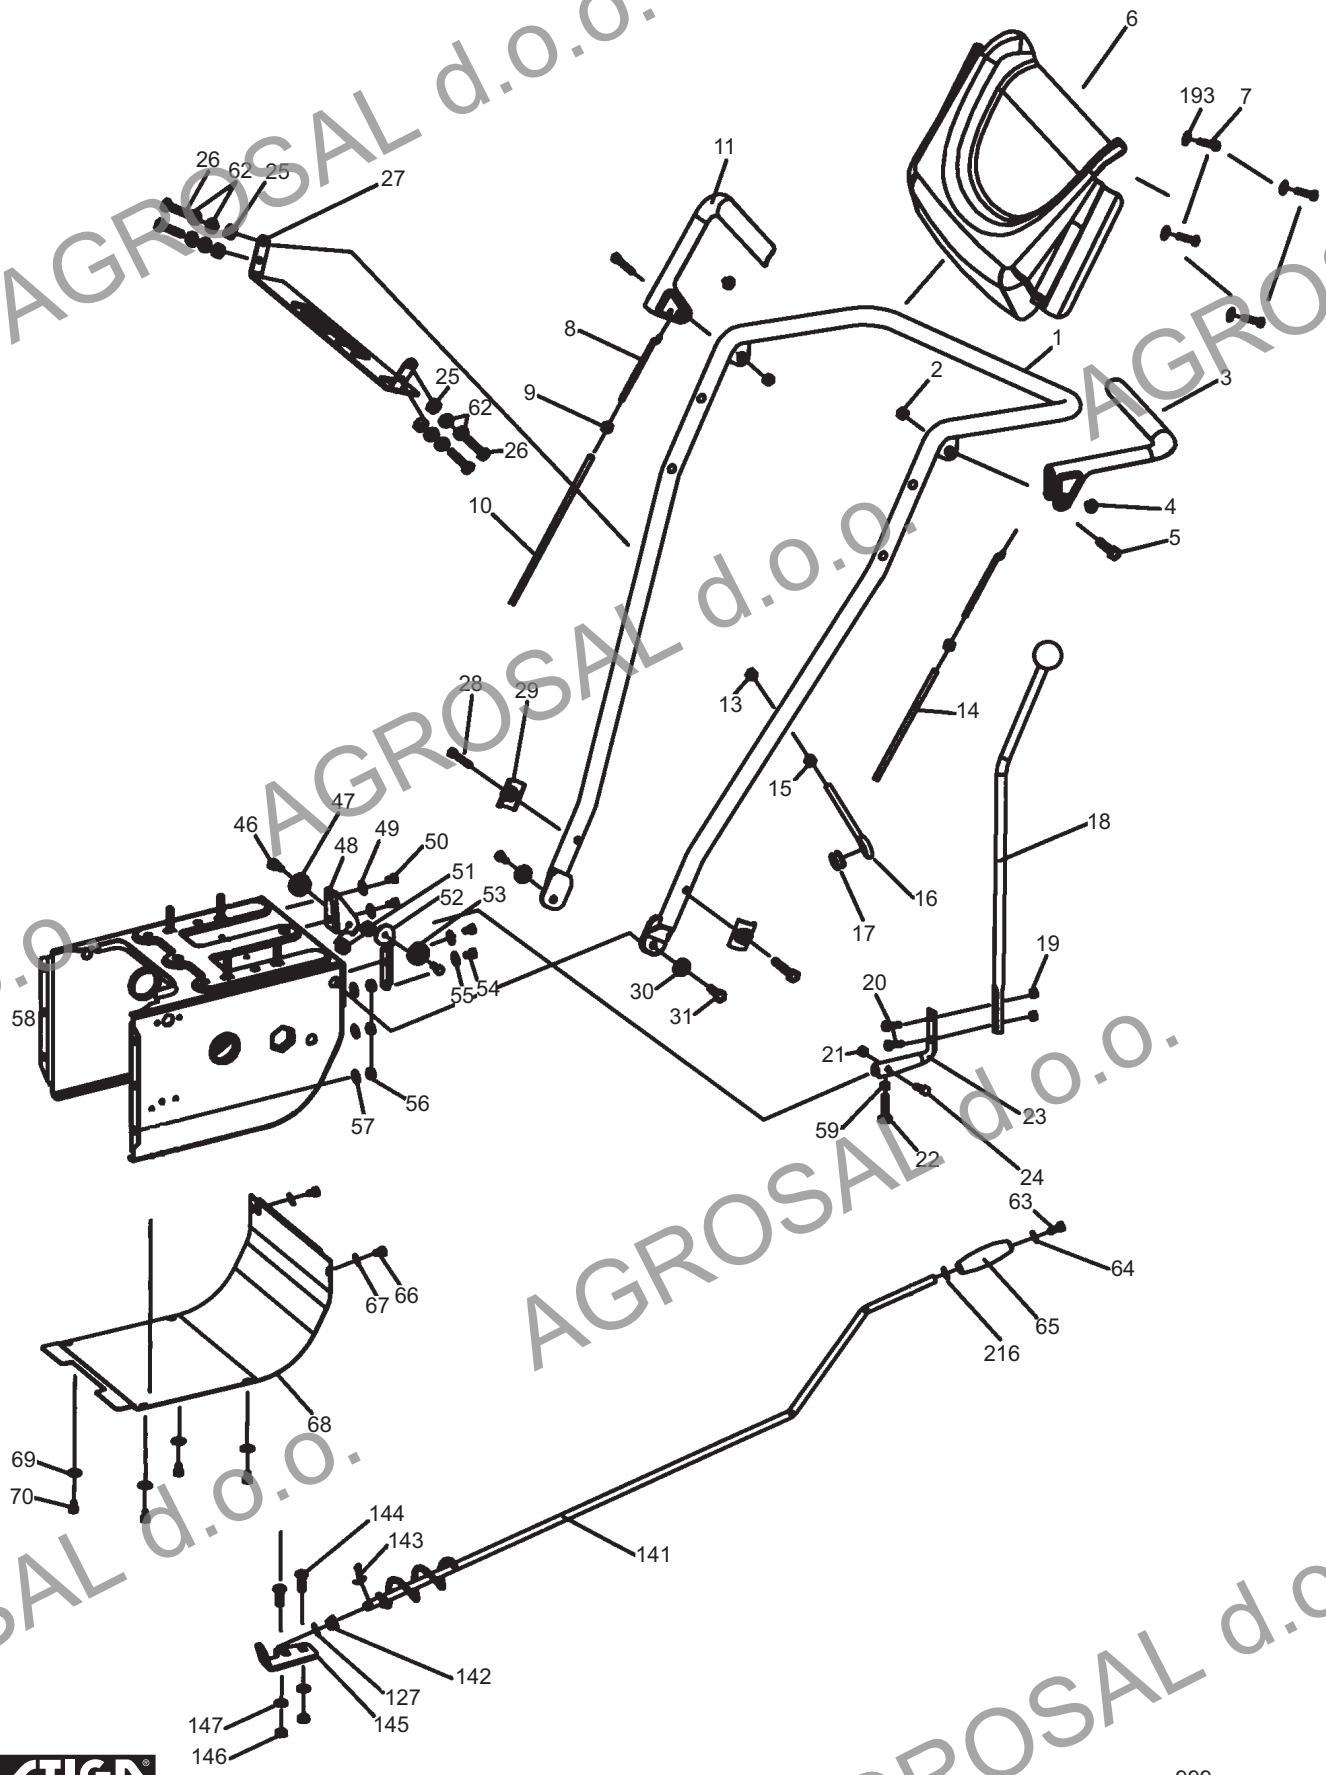

Utgåva Issue		Bildnr Picture No		SNOW CUBE ALPINA AS 56A, AS 62A STYRE REGLAGE		SNOW CUBE ALPINA AS 56A, AS 62A HANDLE CONTROLS		Sida Page	
2011-14		2171B						32	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2803 -31	2870 -41	2867 41						
X	1	1	1	1811-2466-01	Styre.....	Handle.....			
	1		1	1811-2557-01	Styre.....	Handle.....			
	2	2	2	9747-0831-02	Mutter.....	Lock nut.....			
	3	1	1	1811-2567-01	Inkoppl.handtag- hö.....	Clutch handle- RH.....		Sett framifrån	
	4	2	2	1811-2472-01	Gummiskydd.....	Rubber cap.....			
	5	2	2	9997-0845-12	Skruv.....	Screw.....			
	6	1		1811-2570-01	Panel- gul.....	Dashboard- yellow.....			
	6		1	1811-2570-02	Panel- vit.....	Dashboard- white.....			
	7	4	4	1811-2400-01	Skruv.....	Screw.....			
	8	2	2	1811-2458-01	Justerstång.....	Adjustment rod.....			
	9	2	2	9799-0531-02	Mutter.....	Nut.....			
	10	1	1	1811-2585-01	Reglagewire.....	Control cable.....		L = 105 cm	
	11	1	1	1811-2566-01	Inkoppl.handtag- vä.....	Clutch handle- LH.....		Sett framifrån	
	13	1	1	9747-0831-02	Mutter.....	Lock nut.....			
	14	1	1	1811-2586-01	Reglagewire.....	Control cable.....		L = 116,5 cm	
	14		1	1811-2587-01	Reglagewire.....	Control cable.....		L = 117,5 cm	
	15	1	1	9787-0831-32	Mutter.....	Nut.....			
	16	1	1	1811-2468-01	Ogla.....	Eye bolt.....			
	17	1	1	1811-2469-01	Gumminhylsa.....	Rubber sleeve.....			
	18	1	1	1811-2563-01	Växelspak.....	Gear lever.....			
	19	2	2	9739-0631-22	Mutter.....	Nut.....			
	20	2	2	9997-0620-16	Skruv.....	Screw.....			
	21	1	1	9739-0631-22	Mutter.....	Nut.....			
	22	1	1	9997-0620-16	Skruv.....	Screw.....			
	23	1	1	1811-2482-01	Växelarm.....	Gear rod.....			
	24	1	1	9997-0625-16	Skruv.....	Screw.....			
	25	4	4	9747-0631-02	Låsmutter.....	Lock nut.....			
	26	4	4	9997-0635-12	Skruv.....	Screw.....			
	27	1	1	1811-2565-01	Växellägesplåt.....	Gear select plate.....			
	28	2	2	9997-0840-16	Skruv.....	Screw.....			
	29	2	2	1811-2453-01	Styresbricka.....	Handle washer.....			
	30	2	2	9699-0062-02	Planbricka.....	Flat washer.....			
	31	2	2	9997-0820-16	Skruv.....	Screw.....			
	46	2	2	1811-2476-01	Ansatsbult.....	Shoulder bolt.....			
	47	1	1	1811-2440-01	Wirerulle.....	Wire pulley.....			
	48	1	1	1811-2439-01	Fäste.....	Bracket.....			
	49	2	2	9699-0025-02	Planbricka.....	Washer.....			
	50	2	2	9997-0612-16	Skruv.....	Screw.....			
	51	2	2	9739-0631-22	Mutter.....	Nut.....			
	52	1	1	1811-2437-01	Fäste.....	Bracket.....			
	53	1	1	1811-2440-01	Wirerulle.....	Wire pulley.....			
	54	2	2	9997-0612-16	Skruv.....	Screw.....			
	55	2	2	9699-0025-02	Planbricka.....	Washer.....			
	56	6	6	9747-0831-02	Mutter.....	Lock nut.....			
	57	6	6	9699-0028-02	Planbricka.....	Flat washer.....			
X	58	1	1	1811-2595-01	Chassi- gul.....	Chassis- yellow.....			
X	58	1	1	1811-2595-02	Chassi- vit.....	Chassis- white.....			
	59	1	1	9747-0631-02	Låsmutter.....	Lock nut.....			
	62	8	8	9699-0025-02	Planbricka.....	Washer.....			
	63	1	1	9997-0610-16	Skruv.....	Screw.....			
	64	1	1	9699-0025-02	Planbricka.....	Washer.....			
	65	1	1	1811-2442-01	Handtag.....	Grip.....			
	66	2	2	9997-0610-16	Skruv.....	Screw.....			
	67	2	2	9699-0025-02	Planbricka.....	Washer.....			
	68	1	1	1811-2486-01	Bottenplåt.....	Bottom plate.....			
	69	4	4	9699-0025-02	Planbricka.....	Washer.....			
	70	4	4	9997-0610-16	Skruv.....	Screw.....			
	127	1	1	9699-0035-02	Planbricka.....	Flat washer.....			
	141	1	1	1811-2467-01	Inställningsvev.....	Crank.....			
	142	1	1	1811-2431-01	Bussning.....	Bushing.....			
	143	1	1	9599-0054-02	Saxpinne.....	Cotter pin.....			
	144	2	2	9898-0820-16	Skruv.....	Screw.....			
	145	1	1	1811-2430-01	Fäste.....	Bracket.....			

AGROSAL d.o.o.

AGROSAL


AGROSAL d.o.o.

AG

AGROSAL d.o.o.


OSAL d.o.o.

AGROSAL d.o.o.

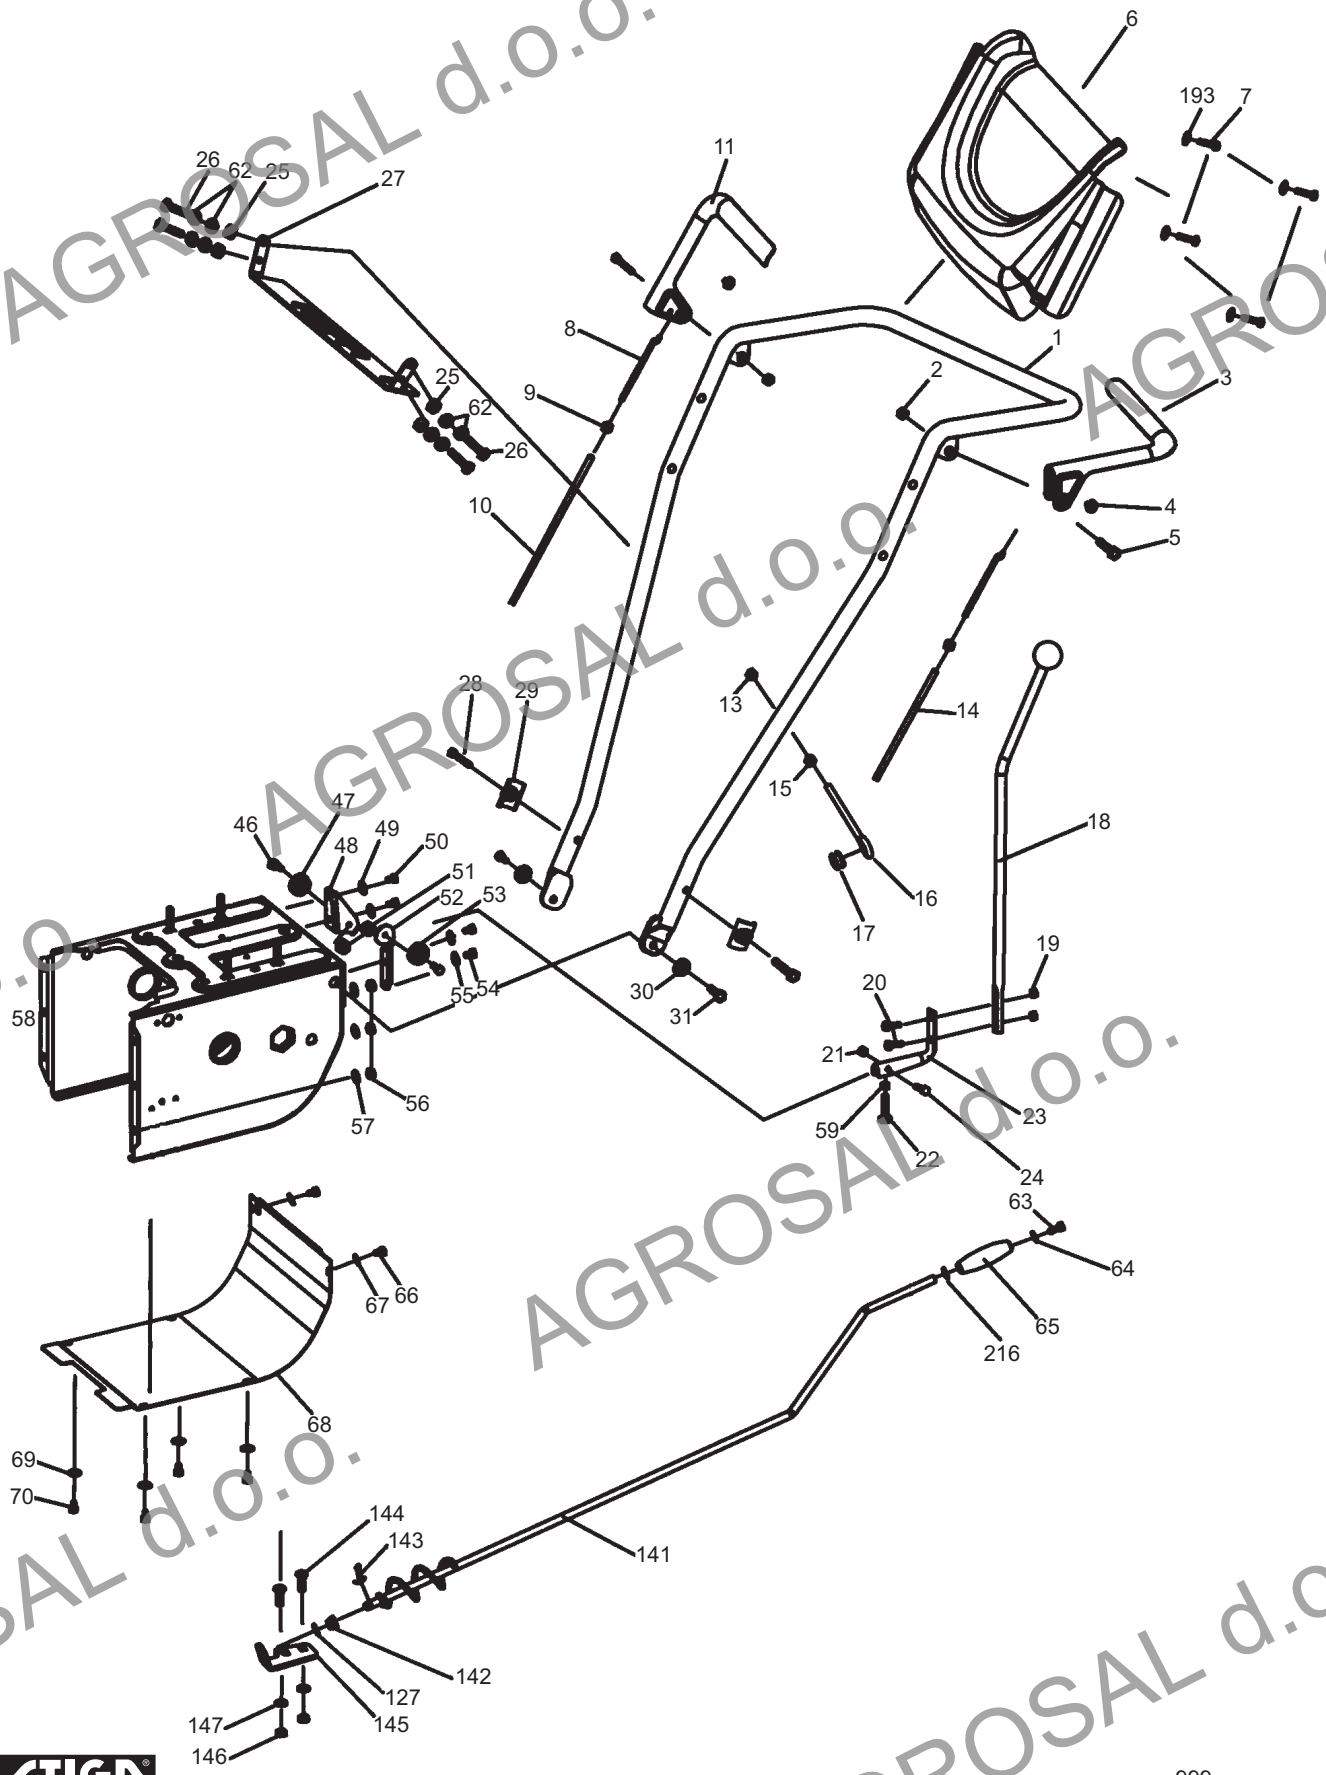

Utgåva Issue		Bildnr Picture No		SNOW CUBE ALPINA AS 56A, AS 62A STYRE REGLAGE		SNOW CUBE ALPINA AS 56A, AS 62A HANDLE CONTROLS		Sida Page	
2011-14		2171B						34	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2803 -31	2870 -41	2867 41						
146	2	2	2	9747-0831-02	Mutter.....	Lock nut.....			
147	2	2	2	9699-0056-02	Planbricka.....	Flat washer.....			
193	4	4	4	9699-0072-02	Bricka.....	Washer.....			
216	1	1	1	9699-0029-02	Planbricka.....	Flat washer.....			
X 999	1			8218-2254-20	Bruksanvisning.....	Owner's manual.....		STIGA ALPINA	
X 999		1	1	8218-2261-20	Bruksanvisning.....	Owner's manual.....			

AGROSAL d.o.o.

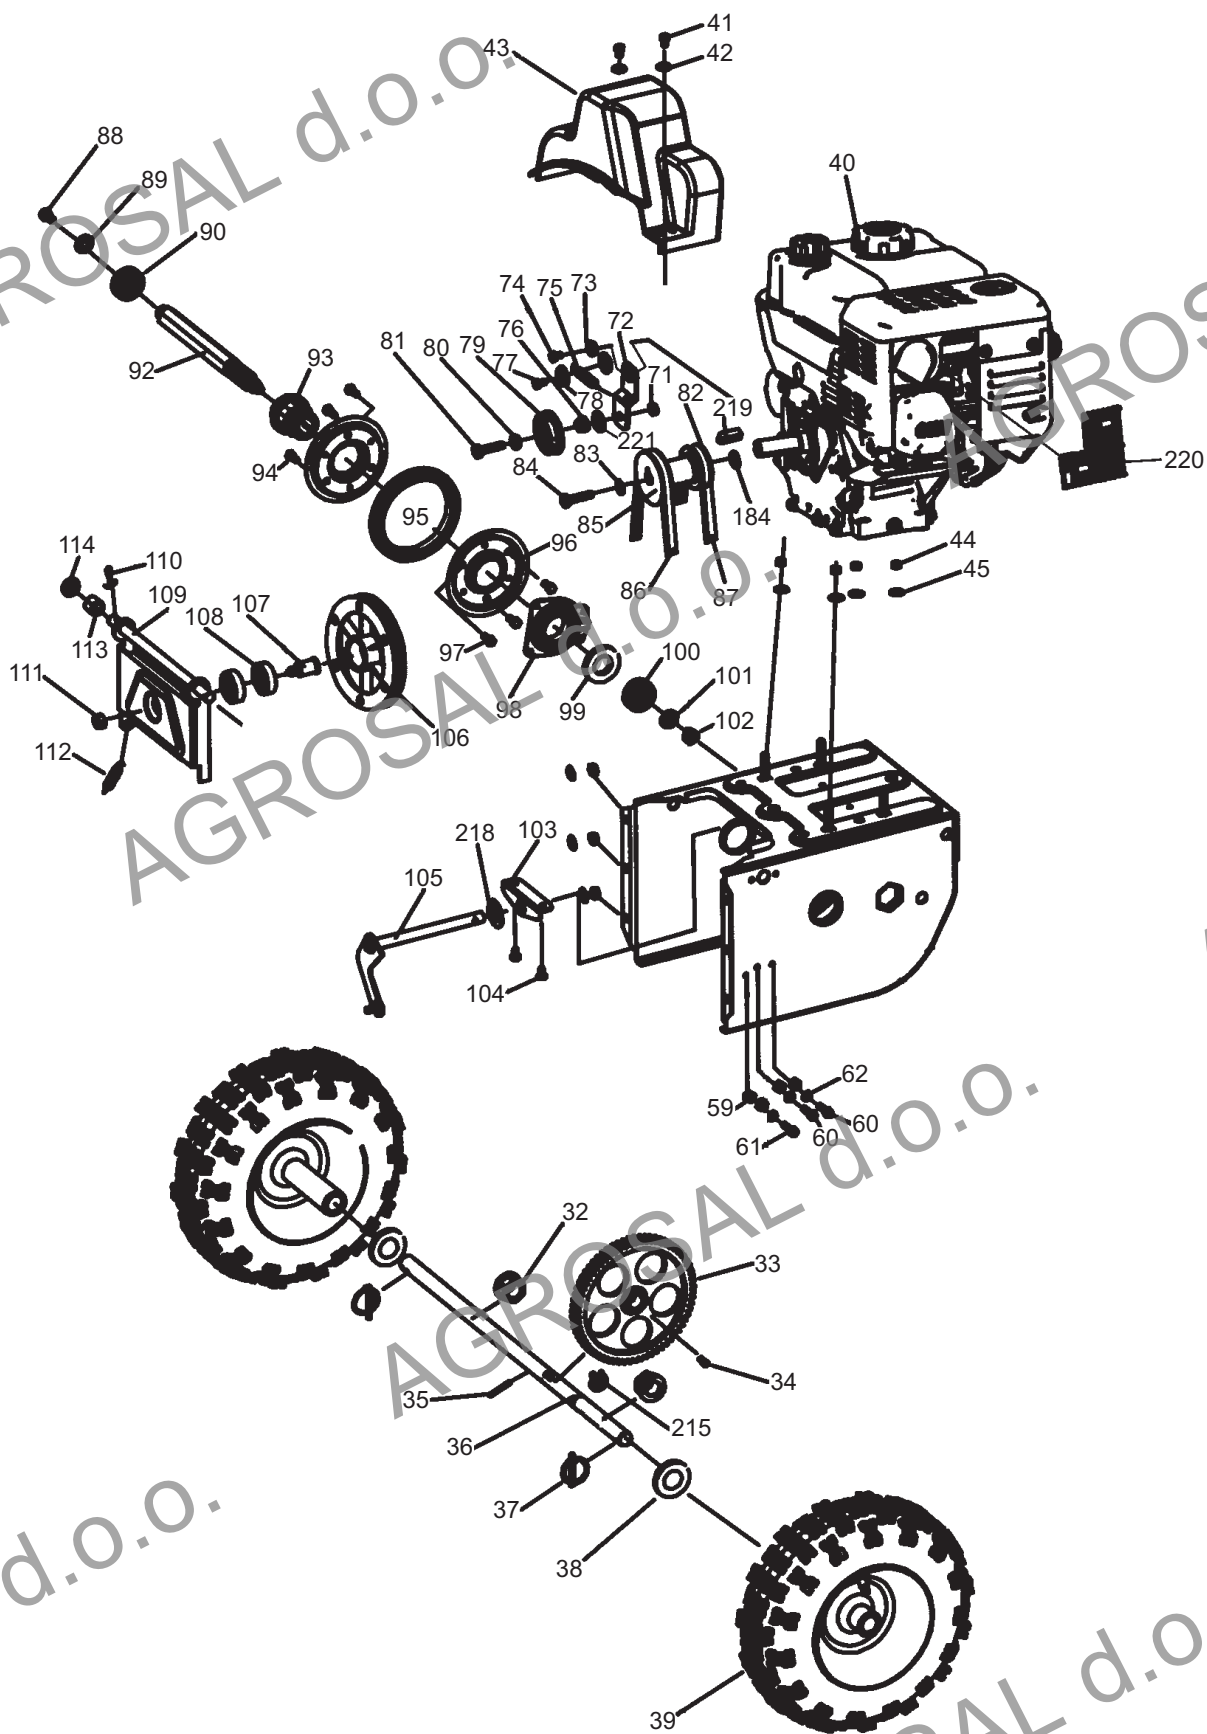


STIGA
2172C
SPARE PARTS

AGROSAL d.o.o.

Utgåva Issue		Bildnr Picture No		SNOW CUBE ALPINA AS 56A, AS 62A TRANSMISSION		SNOW CUBE ALPINA AS 56A, AS 62A TRANSMISSION		Sida Page	
2011-14		2172C						36	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2803 -31	2870 -41	2867 41						
32	2	2	2	1811-2452-01	Hjulaxelbussning	Wheel shaft bushing			
33	1	1	1	1811-2421-01	Drev	Gear			
34	2	2	2	1811-2406-01	Kil	Key			
35	1	1	1	9595-0212-00	Spännstift	Locating pin			
36	1	1		1811-2441-01	Hjulaxel	Wheel shaft			
36			1	1811-2550-01	Hjulaxel	Wheel shaft			
37	2	2	2	1811-2478-01	Fjäderpinne	Spring pin			
38	2	2	2	1811-2407-01	Planbricka	Flat washer			
39	2	2		1811-2408-01	Hjul kpl	Wheel assy		13" (4.10 - 6)	
39			2	1811-2541-01	Hjul kpl	Wheel assy		15"	
40	1	1		118550656/0	Motor kpl	Engine compl		Manual starter	
40			1	118550657/0	Motor kpl	Engine compl		Electric starter	
41	2	2	2	9997-0610-16	Skruv	Screw			
42	2	2	2	9699-0025-02	Planbricka	Washer			
43	1	1	1	1811-2455-01	Remskydd	Belt cover			
44	4	4	4	9747-0831-02	Mutter	Lock nut			
45	4	4	4	9699-0028-02	Planbricka	Flat washer			
59	3	3	3	9747-0631-02	Låsmutter	Lock nut			
60	2	2	2	9997-0630-12	Skruv	Screw		L = 30 mm	
61	1	1	1	9997-0620-16	Skruv	Screw		L = 20 mm	
62	3	3	3	9699-0025-02	Planbricka	Washer			
71	1	1	1	9747-0631-02	Låsmutter	Lock nut			
72	1	1		1811-2594-01	Spännarm	Tension arm			
73	1	1		1811-2559-01	Spännarmsbricka	Tension washer			
74	1	1	1	9997-0820-16	Skruv	Screw			
75	1	1	1	1811-2555-01	Fjäder	Spring			
76	1	1	1	1811-2575-01	Bricka	Washer			
77	1	1	1	9997-0812-16	Skruv	Screw			
78	2	2	2	9699-0028-02	Planbricka	Flat washer			
79	1	1	1	1811-2593-01	Spännrulle kpl	Tension pulley			
80	1	1	1	1811-2427-01	Bricka	Washer			
81	1	1	1	9997-0830-16	Skruv	Screw			
82	1	1	1	1811-2473-01	Remskiva	Belt pulley			
83	1	1	1	1811-2542-01	Planbricka	Plain cushion			
84	1	1	1	9987-5125-16	Skruv	Screw			
85	1	1		1811-2474-01	Remskiva	Belt pulley			
85			1	1811-2560-01	Remskiva	Main belt pulley			
86			1	1811-2578-01	Drivrem	Belt			
86	1	1		1811-2579-01	Drivrem	Belt			
87	1	1	1	1811-2410-01	Drivrem	Belt			
88	1	1	1	9997-0816-16	Skruv	Screw			
89	3	3	3	9699-0122-02	Bricka	Washer			
90	1	1	1	1811-2411-01	Lager	Bearing			
92	1	1	1	1811-2423-01	Sexkantsaxel	Hex shaft			
93	1	1	1	1811-2435-01	Nav	Hub			
94	3	3	3	9997-0612-16	Skruv	Screw			
95	1	1	1	1811-2584-01	Friktionsring	Friction ring			
96	2	2	2	1811-2433-01	Friktionshjul	Friction wheel			
97	3	3	3	9997-0612-16	Skruv	Screw			
98	1	1	1	1811-2434-01	Växelförare	Gear selector hub			
99	1	1	1	1811-2412-01	Låsring	Lock ring			
100	1	1	1	1811-2413-01	Lager	Bearing			
101	1	1	1	9699-0035-02	Planbricka	Flat washer			
102	1	1	1	9747-1031-02	Låsmutter	Lock nut			
103	1	1	1	1811-2420-01	Fäste	Bracket			
104	2	2	2	9997-0610-16	Skruv	Screw			
105	1	1	1	1811-2465-01	Växelförarm	Gear lever			
106	1	1	1	1811-2428-01	Drivskiva	Drive pulley			
107	1	1	1	1811-2429-01	Axeltapp	Shaft			
108	2	2	2	1811-2414-01	Lager	Bearing			
109	1	1	1	1811-2424-01	Fäste- drivskiva	Bracket- drive pulley			
110	1	1	1	9599-0054-02	Saxpinne	Cotter pin			
111	1	1	1	9747-1031-02	Låsmutter	Lock nut			

AGROSAL d.o.o.

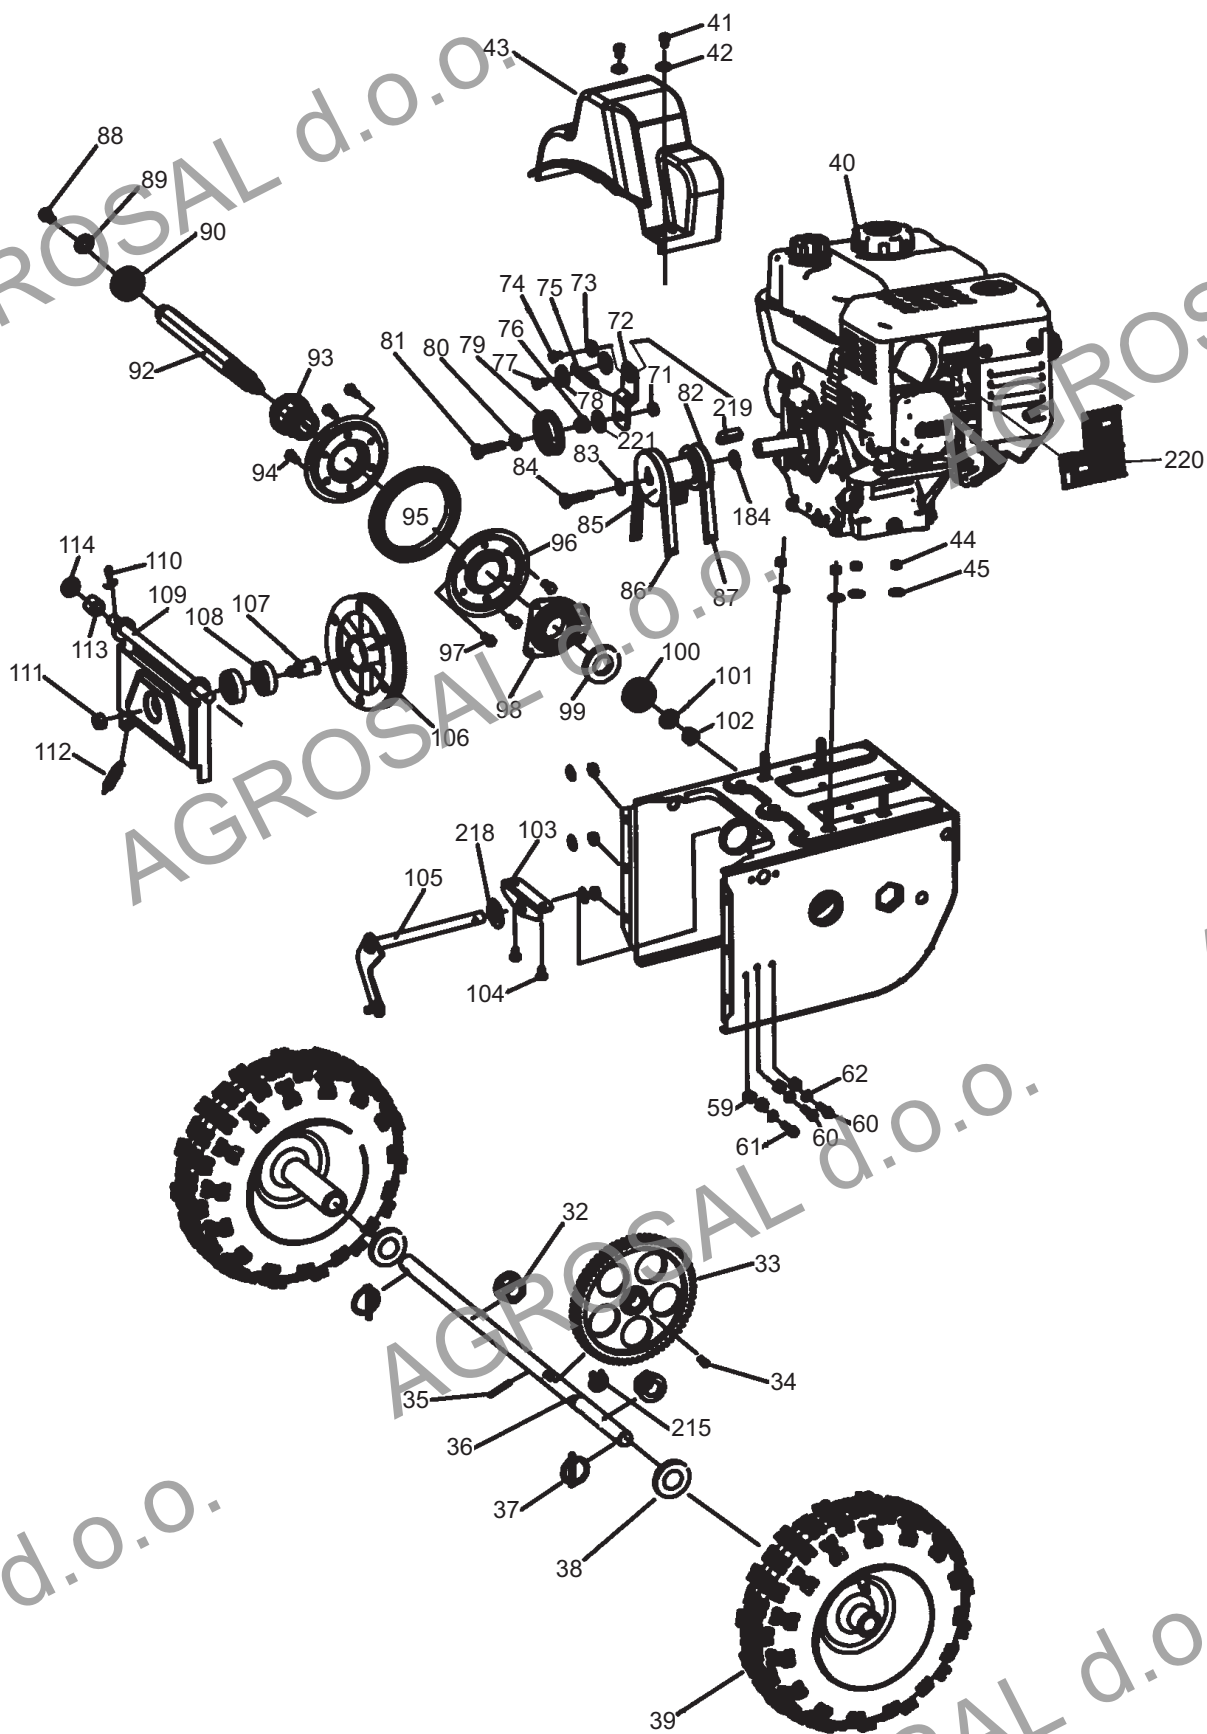

STIGA
2172C
SPARE PARTS


AGROSAL d.o.o.

Utgåva Issue 2011-14		Bildnr Picture No 2172C			SNOW CUBE ALPINA AS 56A, AS 62A TRANSMISSION		SNOW CUBE ALPINA AS 56A, AS 62A TRANSMISSION		Sida Page 38	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2803 -31	2870 -41	2867 41							
112	1	1	1		1811-2483-01	Fjäder.....	Spring.....			
113	1	1	1		1811-2489-01	Hylsa.....	Collar.....			
114	1	1	1		9699-0037-02	Bricka.....	Washer.....			
184	1	1	1		1811-2477-01	Bricka.....	Washer.....			
215	1	1	1		9650-0019-04	Låsring.....	Retainer ring.....			
218	1	1	1		9699-0037-02	Bricka.....	Washer.....			
219	1	1	1		1811-2581-01	Kil.....	Key.....			
220	1	1	1		1811-2592-01	Värmskydd.....	Heat guard.....			

Utgåva Issue		Bildnr Picture No		SNOW CUBE ALPINA AS 56A, AS 62A INMATNINGSHUS		SNOW CUBE ALPINA AS 56A, AS 62A AUGER HOUSING		Sida Page	
2011-14		2173B						40	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2803 -31	2870 -41	2867 41						
57	1	1	1	9699-0028-02	Planbricka.....	Flat washer.....			
115	1	1	1	9747-0631-02	Låsmutter.....	Lock nut.....			
116	1	1	1	1811-2438-01	Fäste.....	Bracket.....			
117	2	2	2	9699-0025-02	Planbricka.....	Washer.....			
118	2	2	2	9997-0610-16	Skruv.....	Screw.....			
119	1	1	1	1811-2440-01	Wirerulle.....	Wire pulley.....			
120	1	1	1	1811-2476-01	Ansatsbult.....	Shoulder bolt.....			
121	1	1	1	1811-2425-01	Spännrulle m.lager.....	Tension roller w.bear.....			
122	1	1	1	1811-2426-01	Distans.....	Spacer.....			
123	1	1	1	9997-0845-12	Skruv.....	Screw.....			
124	1	1	1	1811-2427-01	Bricka.....	Washer.....			
125	1	1	1	9747-0831-02	Mutter.....	Lock nut.....			
126	1	1	1	9747-1031-02	Låsmutter.....	Lock nut.....			
127	1	1	1	9699-0035-02	Planbricka.....	Flat washer.....			
128	1	1	1	1811-2448-01	Spännarm.....	Tension arm.....			
129	1	1	1	1811-2457-01	Fjäder.....	Spring.....			
130	1	1	1	1811-2475-01	Skruv.....	Screw.....			
131	1	1	1	1811-2462-01	Fjäder.....	Spring.....			
132	2	2	2	9699-0028-02	Planbricka.....	Flat washer.....			
133	1	1	1	9747-0831-02	Mutter.....	Lock nut.....			
148	2	2	2	9747-0831-02	Mutter.....	Lock nut.....			
149	2	2	2	9898-0820-16	Skruv.....	Screw.....			
150	4	4	4	9747-0831-02	Mutter.....	Lock nut.....			
151	1	1	1	1811-2548-01	Skrapskär.....	Shave plate.....			
151				1811-2549-01	Skrapskär.....	Shave plate.....			
152	2	2	2	9898-0820-16	Skruv.....	Screw.....			
153	4	4	4	9699-0056-02	Planbricka.....	Flat washer.....			
154	2	2	2	9747-0831-02	Mutter.....	Lock nut.....			
155	2	2	2	9699-0056-02	Planbricka.....	Flat washer.....			
156	2	2	2	1811-2568-01	Släpsko.....	Skid shoe.....			
157	1			1811-2589-01	Snöskruvhus- gul.....	Auger housing- yellow.....	56 cm		
157		1		1811-2589-02	Snöskruvhus- vit.....	Auger housing- white.....	56 cm		
157			1	1811-2590-02	Snöskruvhus- vit.....	Auger housing- white.....	62 cm		
186	4	4	4	9898-0820-16	Skruv.....	Screw.....			
187	2	2	2	9699-0056-02	Planbricka.....	Flat washer.....			
188	2	2	2	9747-0831-02	Mutter.....	Lock nut.....			
189	2	2	2	9747-0631-02	Låsmutter.....	Lock nut.....			
190	2	2	2	9997-0616-16	Skruv.....	Screw.....			
191	6	6	6	9747-0631-02	Låsmutter.....	Lock nut.....			
192	3	3	3	1811-2445-01	Flänsbricka.....	Chute washer.....			
194	6	6	6	1811-2551-01	Skruv.....	Screw.....			
195	2	2	2	9747-0831-02	Mutter.....	Lock nut.....			
196	2	2	2	1811-2498-01	Låsrott.....	Locking knob.....			
197	2	2	2	9898-0825-16	Skruv.....	Screw.....			
198	1	1	1	1811-2571-01	Utkaströr.....	Chute.....			
199	1	1	1	9997-0620-16	Skruv.....	Screw.....			
200	1	1	1	1811-2461-01	Fjäder.....	Spring.....			
201	1	1	1	9747-0631-02	Låsmutter.....	Lock nut.....			
202	1	1	1	1811-2432-01	Utkastrydd.....	Chute guard.....			
203	1	1	1	1811-2500-01	Rensdon.....	Cleaner stick.....			
204	2	2	2	9898-0820-16	Skruv.....	Screw.....			
205	1	1	1	1811-2572-01	Fäste- rensdon.....	Cleaner stick bracket.....			
212			1	1811-2553-01	Brytbult.....	Shear bolt.....			
213			1	1811-2546-01	Låsmutter.....	Lock nut.....			
214	2	2	2	1811-2547-01	Gummiblock.....	Rubber block.....			


AGROSAL d.o.o.

AGROSAL

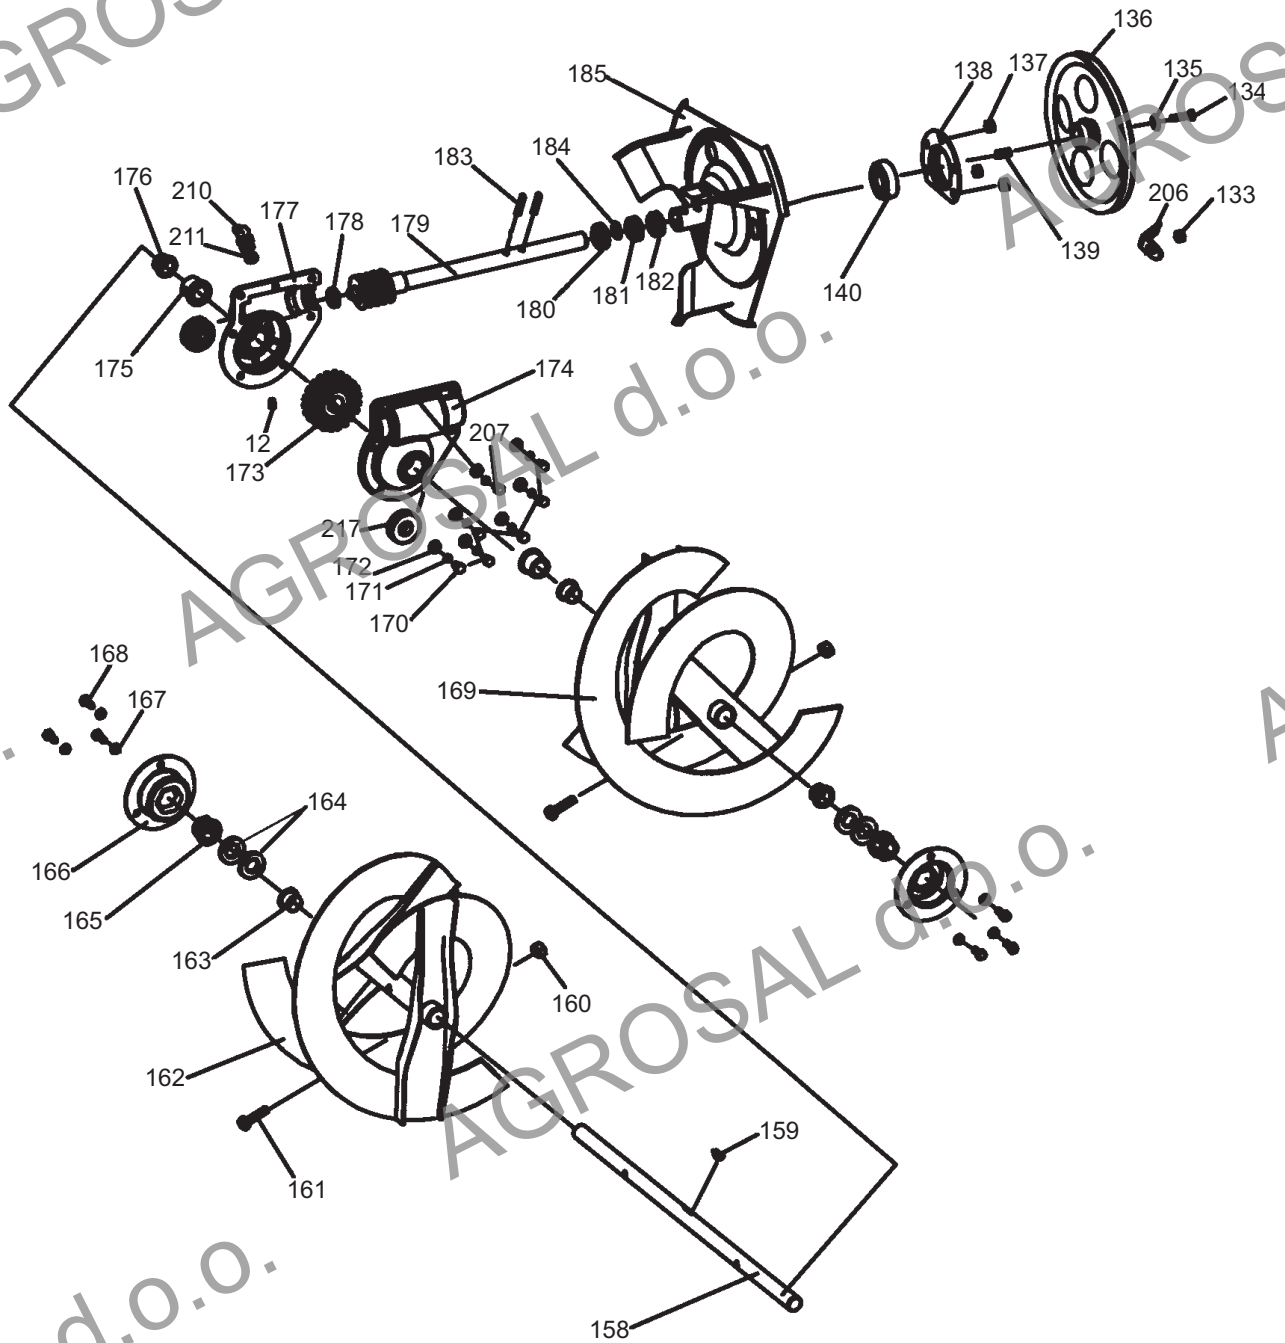

AGROSAL d.o.o.

Utgåva Issue		Bildnr Picture No		SNOW CUBE ALPINA AS 56A, AS 62A SNÖSKRUV		SNOW CUBE ALPINA AS 56A, AS 62A AUGER		Sida Page	
2011-14		2174C						42	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2803 -31	2870 -41	2867 41						
12	1	1	1	9997-0510-16	Skruv.....	Screw.....			
133	1	1	1	9747-0831-02	Mutter.....	Lock nut.....			
34	1	1	1	9997-0820-16	Skruv.....	Screw.....			
135	1	1	1	9699-0056-02	Planbricka.....	Flat washer.....			
136	1	1		1811-2464-01	Remskiva.....	Belt pulley.....			
136			1	1811-2556-01	Remskiva.....	Belt pulley.....			
137	3	3	3	9747-0831-02	Mutter.....	Lock nut.....			
138	1	1	1	1811-2422-01	Lagerskål.....	Bearing cover.....			
139	1	1	1	9600-0170-00	Plattkil.....	Flat key.....			
140	1	1	1	1811-2415-01	Lager.....	Bearing.....			
158	1	1		1811-2447-01	Snöskruvaxel.....	Auger shaft.....		Ø = 19 mm	
158			1	1811-2552-01	Snöskruvaxel.....	Auger shaft.....			
159	1	1	1	1811-2416-01	Kil.....	Key.....			
160	2	2	2	9747-0831-02	Mutter.....	Lock nut.....			
161	1	1	1	1811-9012-01	Brytbultsats.....	Shear bolt kit.....		Inkl. pos 160	
162	1	1		1811-2480-01	Snöskruv- vä.....	Auger- LH.....		Sett framifrån	
162			1	1811-2561-01	Snöskruv- vä.....	Auger- LH.....			
163	1	1	1	1811-2443-01	Axelbussning.....	Shaft bushing.....			
164	2	2	2	1811-2418-01	Planbricka.....	Flat washer.....			
165	2	2	2	1811-2444-01	Axelbussning.....	Shaft bushing.....			
166	2	2	2	1811-2449-01	Lagerfäste.....	Bearing cover.....			
167	6	6	6	9699-0028-02	Planbricka.....	Flat washer.....			
168	6	6	6	9997-0812-16	Skruv.....	Screw.....			
169	1	1		1811-2479-01	Snöskruv- hö.....	Auger- RH.....		Sett framifrån	
169			1	1811-2562-01	Snöskruv- hö.....	Auger- RH.....			
170	6	6	6	9997-0620-16	Skruv.....	Screw.....			
171	7	7	7	9683-0025-02	Låsbricka.....	Lock washer.....			
172	7	7	7	9699-0025-02	Planbricka.....	Washer.....			
173	1	1	1	1811-2463-01	Snäckdrev.....	Worm wheel.....			
174	1	1	1	1811-2484-01	Snäckväxelhus- hö.....	Gear housing- RH.....		Sett framifrån	
174A	1	1	1	1811-2569-01	Packning d.o.....	Gasket.....		Ej ill/not ill	
175	1	1	1	1811-2490-01	Bussning.....	Bushing.....			
176	4	4	4	1811-2443-01	Axelbussning.....	Shaft bushing.....			
177	1	1	1	1811-2485-01	Snäckväxelhus- vä.....	Gear housing- LH.....		Sett framifrån	
178	1	1	1	1811-2402-01	Lager.....	Bearing.....			
179	1	1	1	1811-2454-01	Fläktaxel.....	Fan shaft.....		Ø = 20 mm	
180	1	1	1	1811-2403-01	Lager.....	Bearing.....			
181	1	1	1	1811-2404-01	Trycklager.....	Thrust bearing.....			
182	1	1	1	1811-2405-01	Tätningring.....	Seal ring.....		32 x 20 x 6 mm	
183	2	2	2	9595-0258-00	Spännstift.....	Locating pin.....			
184	1	1	1	1811-2477-01	Bricka.....	Washer.....			
185	1	1	1	1811-2419-01	Fläkt.....	Fan.....			
206	1	1	1	1811-2591-01	Remstyrning.....	Belt plate.....			
207	1	1	1	9997-0625-16	Skruv.....	Screw.....			
210	1	1	1	1811-2544-01	Smörjnippel.....	Grease filling joint.....			
211	1	1	1	1811-2545-01	Packning.....	Wave gasket.....			
217	2	2	2	1811-2580-01	Tätningring.....	Oil seal.....		30 x 19 x 7 mm	

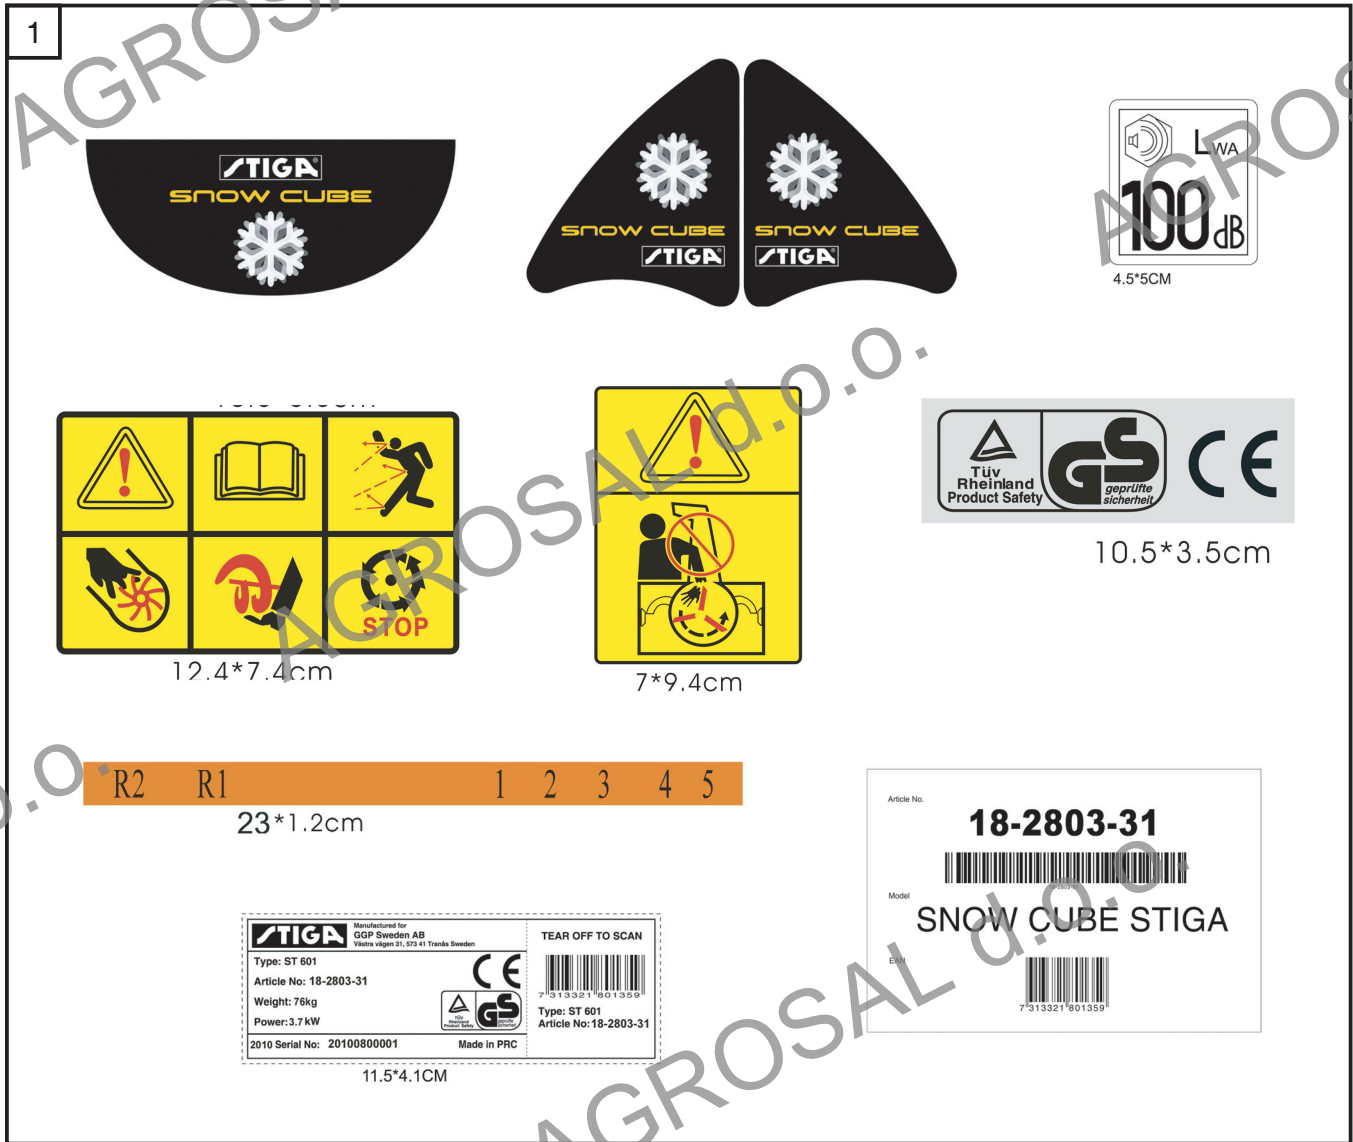





2
Label kit Alpina AS 56A

3
Label kit Alpina AS 62A








Utgåva Issue 2011-14		Bildnr Picture No 2784A		SNOW CUBE ALPINA AS 56A, AS 62A DEKALER		SNOW CUBE ALPINA AS 56A, AS 62A LABELS		Sida Page 44	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	2803 -31	2870 -41	2867 41						
X X	1 2 3	1 1	1	1811-2583-01 1811-2583-02 1811-2582-02	Dekalsats Dekalsats Dekalsats	Label kit Label kit Label kit		Snow Cube Alpina AS 56A Alpina AS 62A	

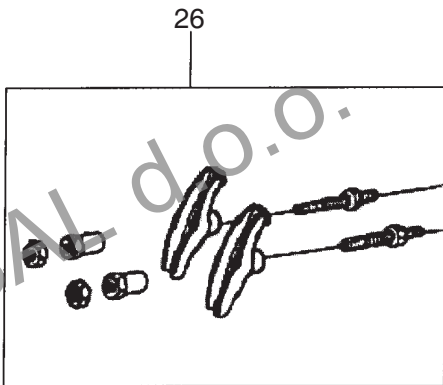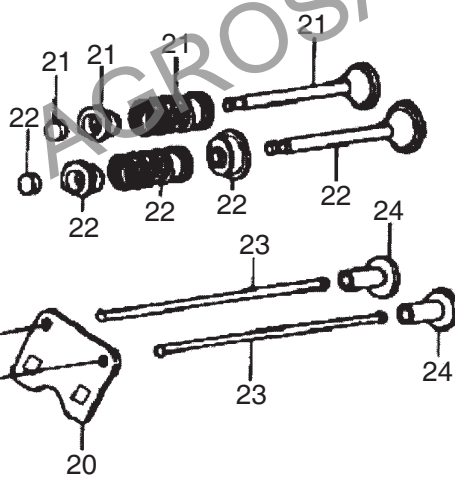
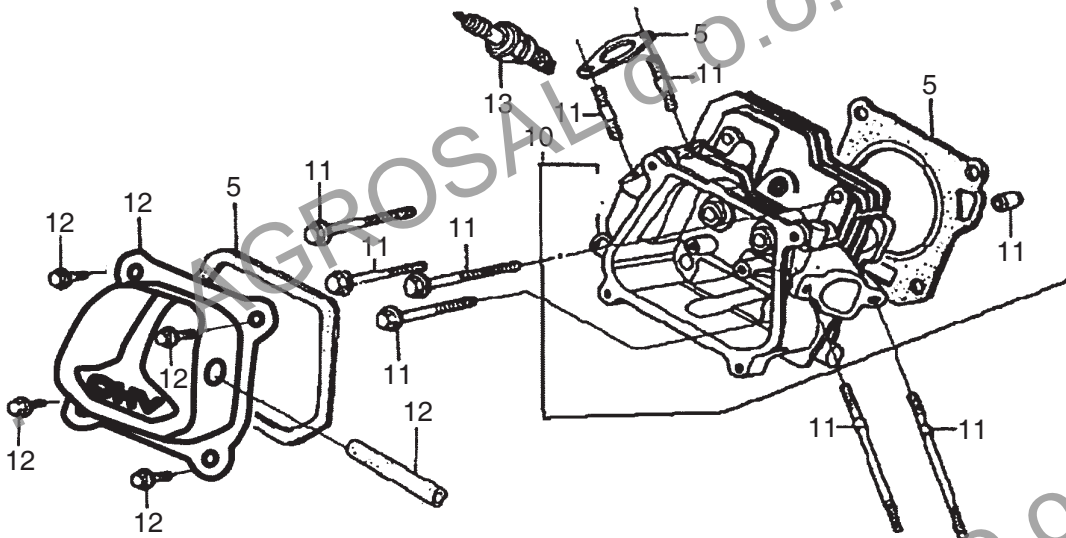
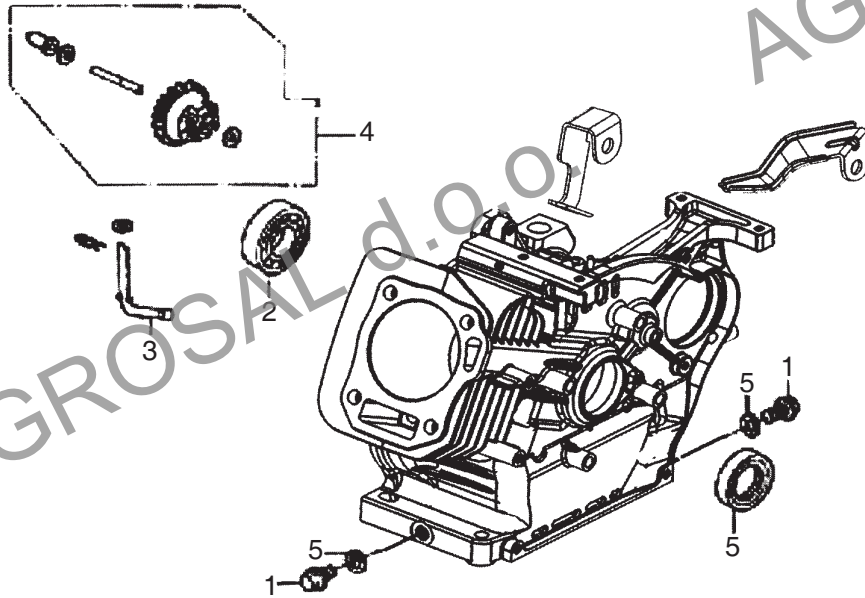


STIGA
2833
SPARE PARTS

Utgåva Issue		Bildnr Picture No		GGP MOTOR SM 70		GGP ENGINE SM 70		Sida Page	
2011-14		2833						122	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	SM70 man	SM70 el							
1	2	2		118550460/0	Oljeavtappn.plugg.....	Drain plug bolt.....			
2	1	1		118550462/0	Kullager.....	Ball bearing.....			
3	1	1		118550459/0	Regulatorarm.....	Governor arm shaft.....			
4	1	1		118550458/0	Regulatordrev kpl.....	Governor gear assy.....			
5	1	1		118550621/0	Packningssats.....	Engine gasket set.....			
10	1	1		118550521/0	Topplöck kpl.....	Cylinder head assy.....			
11	1	1		118550626/0	Skruvsats- topplöck.....	Hardware kit- cyl.head.....			
12	1	1		118550627/0	Ventilkåpa kpl.....	Head cover assy.....			
13	1	1		9400-0244-00	Tändstift.....	Spark plug.....			
20	1	1		118550622/0	Plåt.....	Plate.....			
21	1	1		118550472/0	Insugn.ventil kpl.....	Intake valve assy.....			
22	1	1		118550473/0	Utblåsn.ventil kpl.....	Exhaust valve assy.....			
23	2	2		118550474/0	Stötstång.....	Push rod.....			
24	2	2		118550623/0	Ventillyftare.....	Valve lifter.....			
25	1	1		118550624/0	Kamaxel.....	Camshaft.....			
26	2	2		118550625/0	Vipparm kpl.....	Rocker arm assy.....			

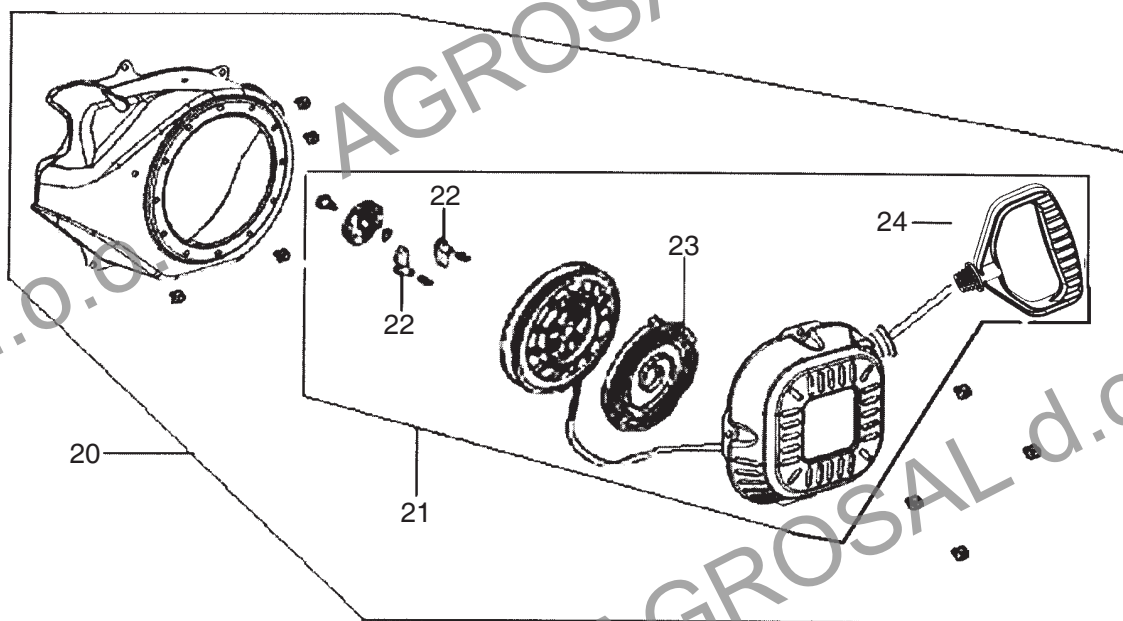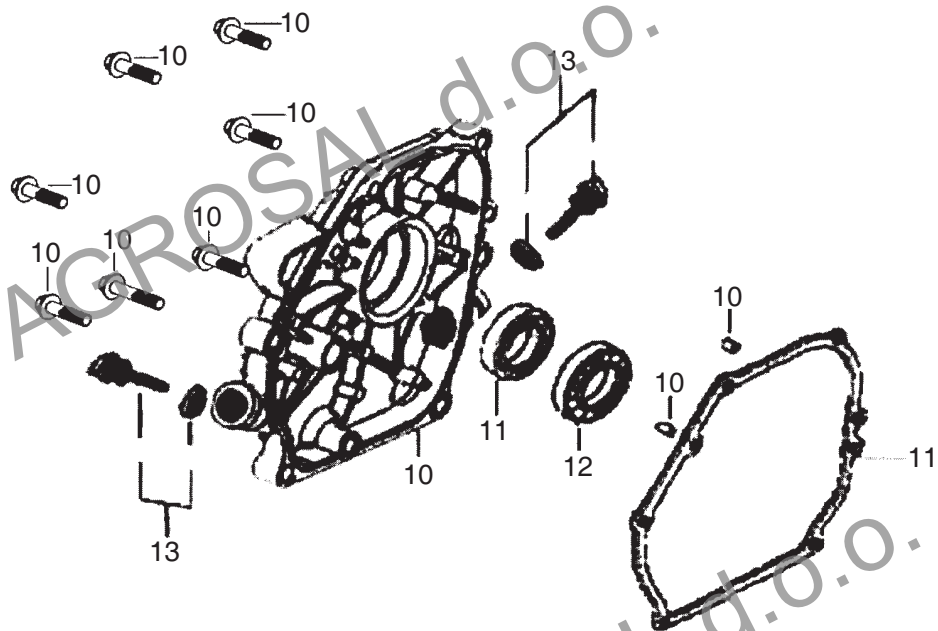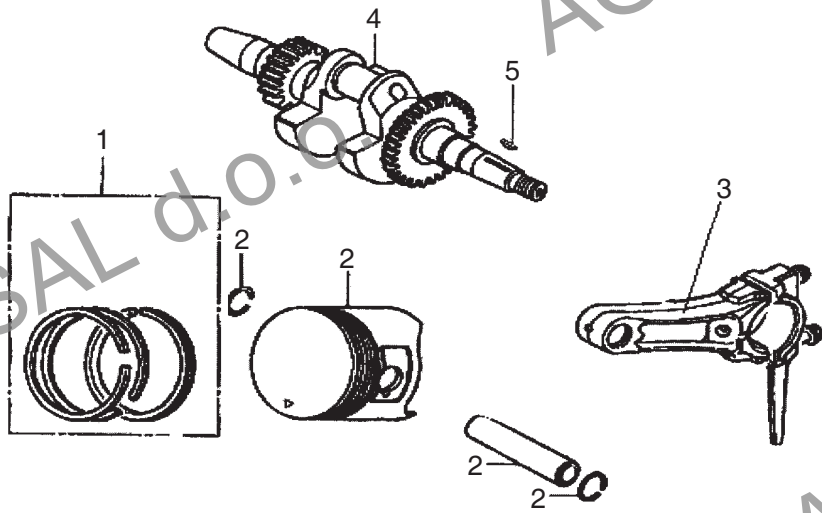

Utgåva Issue		Bildnr Picture No		GGP MOTOR SM 70		GGP ENGINE SM 70		Sida Page	
2011-14		2834						124	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	SM70 man	SM70 el							
1	1	1		118550615/0	• Kolvringsatts	• Ring set.....			
2	1	1		118550614/0	Kolv kpl.....	Piston assy		Inkl. pos 1	
3	1	1		118550616/0	Vevstake	Connecting rod			
4	1	1		118550617/0	Vevaxel	Crankshaft.....			
5	1	1		118550618/0	Kil	Key			
10	1	1		118550619/0	Vevhusgavel kpl.....	Case cover assy		Inkl. pos 12-13	
11	1	1		118550621/0	Packningssatts	Engine gasket set			
12	1	1		118550462/0	• Kullager	• Ball bearing			
13	2	2		118550620/0	• Plugg kpl	• Cap assy.....			
X 20	1	1		118550632/1	Fläkthuset m start.....	Recoil starter assy		Inkl. pos 21	
X 21	1	1		118550628/1	• Start kpl	• Starter assy		Inkl. pos 22-24	
22	2	2		118550629/0	•• Startspärr.....	•• Starter ratchet			
23	1	1		118550630/0	•• Returfjäder.....	•• Recoil starter spring.....			
24	1	1		118550631/0	•• Starthandtag	•• Recoil starter knob			

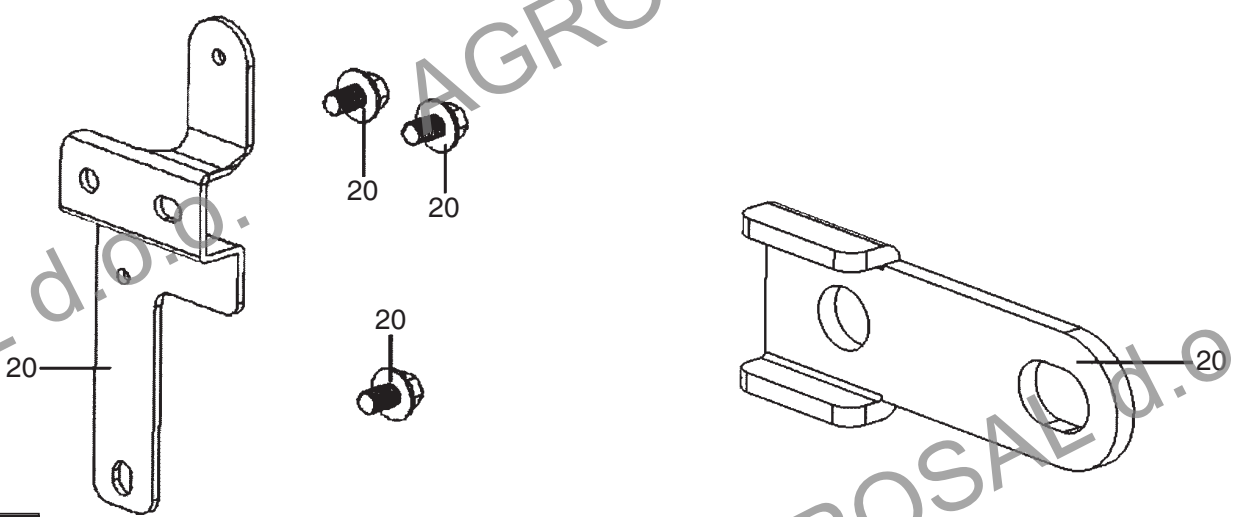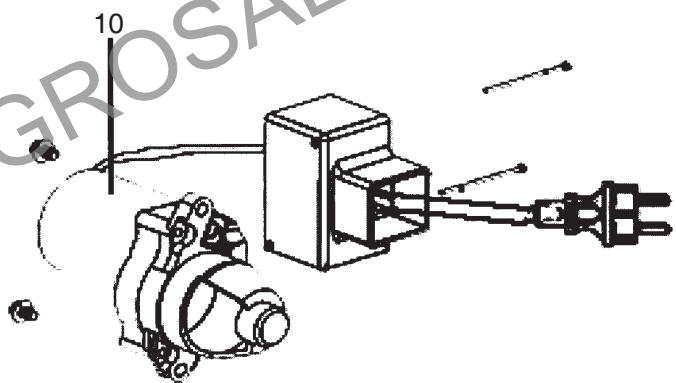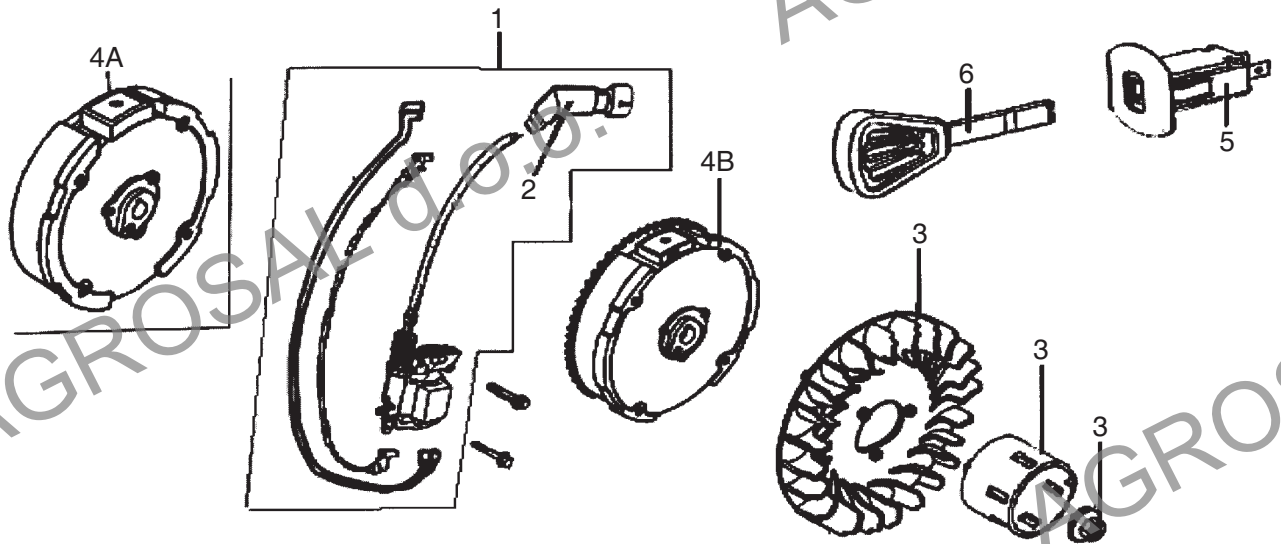


STIGA
2835
SPARE PARTS

Utgåva Issue		Bildnr Picture No		GGP MOTOR SM 70		GGP ENGINE SM 70		Sida Page	
2011-14		2835						126	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	SM70 man	SM70 el							
1	1	1		118550634/0	Tändspole kpl.....	Ignition coil assy.....		Inkl. pos 2	
2	1	1		118550633/0	• Tändstiftshatt.....	• Spark plug cap.....			
3	1	1		118550635/0	Kylfläkt kpl.....	Cooling fan assy.....			
4A	1			118550489/0	Svånghjul kpl.....	Flywheel assy.....			
4B		1		118550735/0	Svånghjul kpl.....	Flywheel assy.....			
5	1	1		118550638/0	Tändningslås.....	Ignition switch.....			
6	2	2		118550639/0	Tändningsnyckel.....	Switch key.....			
10		1		118550640/0	Startmotor.....	Starter motor.....			
20		1		118550636/0	Fäste- startbox kpl.....	Holder- starting box.....			

AGROSAL d.o.o.






AGROSAL

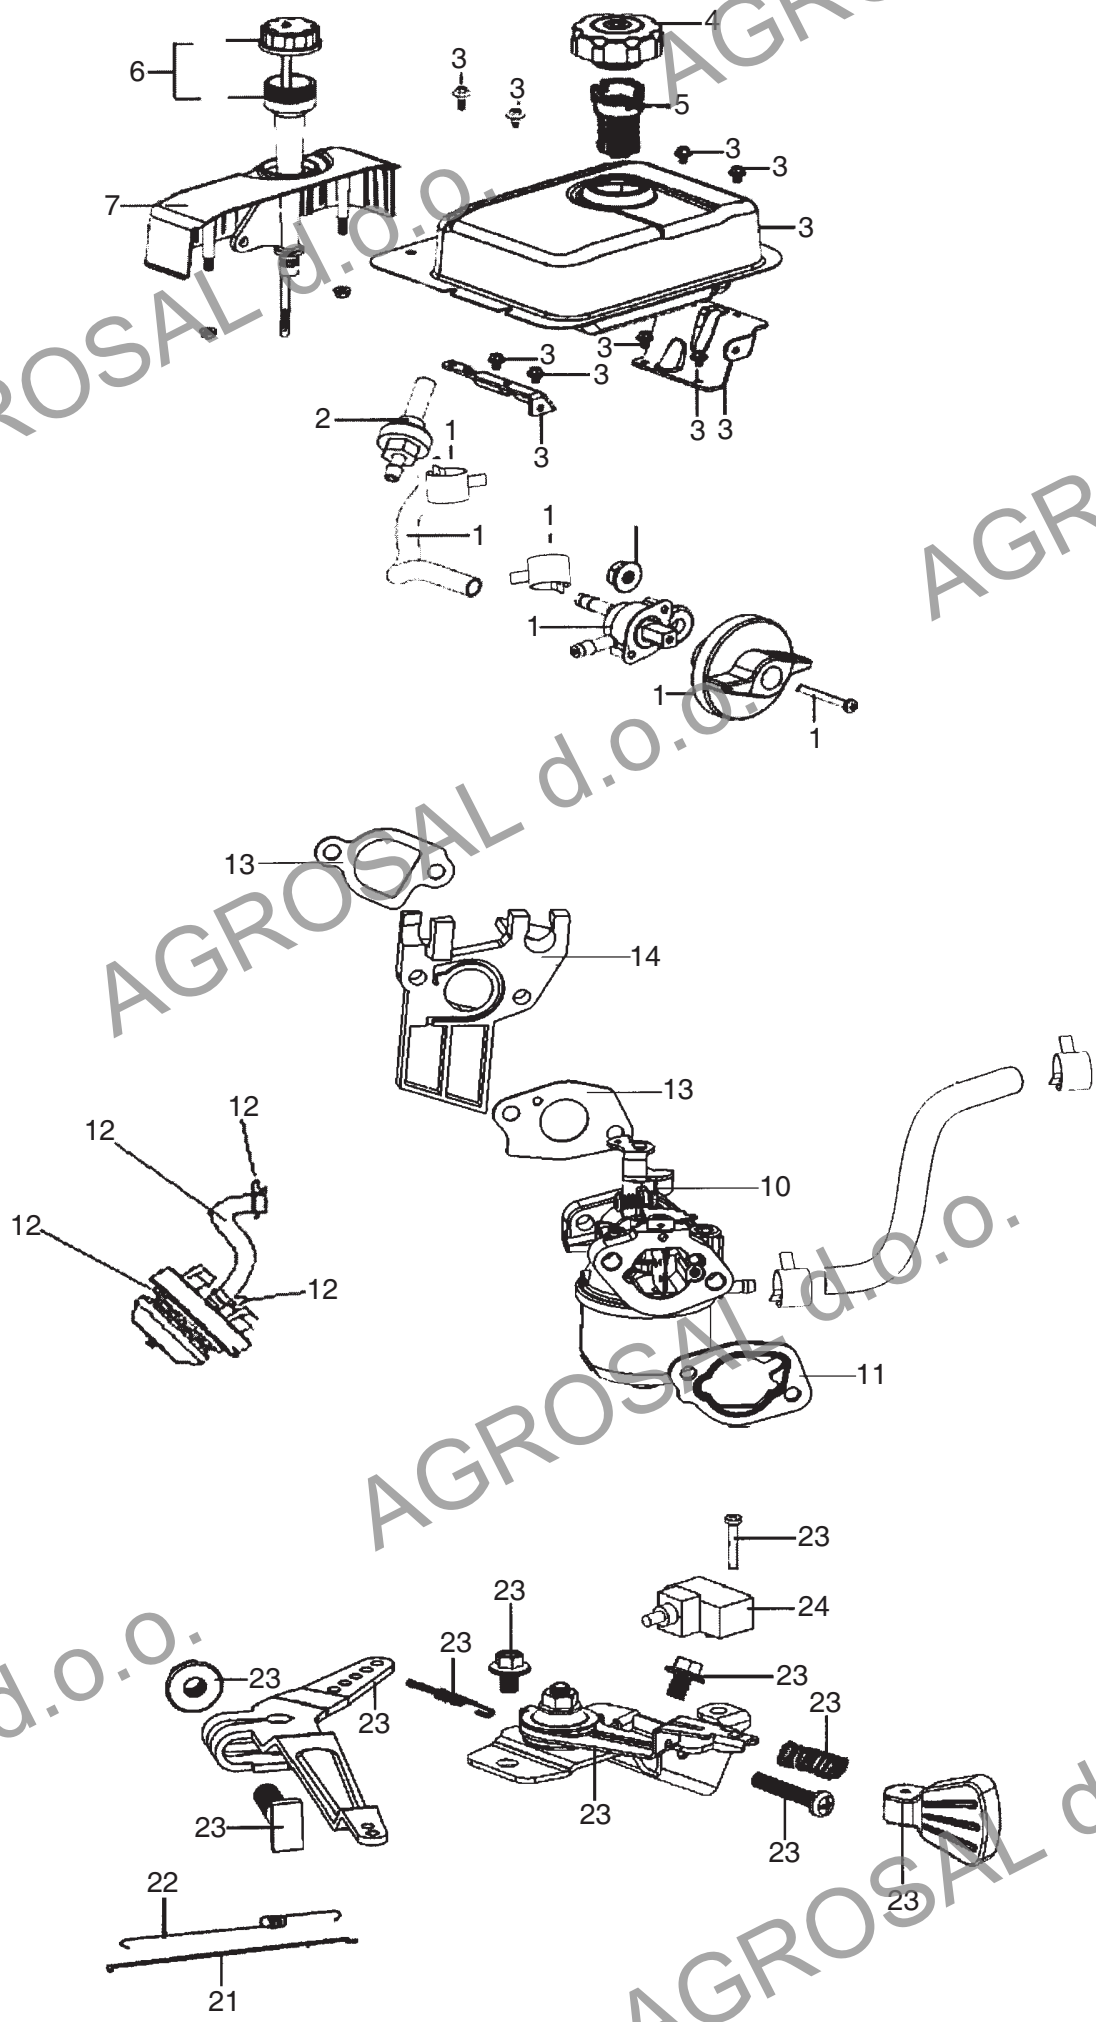

AGROSAL d.o.o.

Utgåva Issue		Bildnr Picture No		GGP MOTOR SM 70		GGP ENGINE SM 70		Sida Page	
2011-14		2836						128	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	SM70 man	SM70 el							
	1	1	1	118550648/0	Bränslekran kpl.....	Fuel switch assy.....			
	2	1	1	118550500/0	Tanknippel	Fuel tank joint.....			
	3	1	1	118550649/0	Bränsletank kpl.....	Fuel tank assy			
	4	1	1	118550650/0	Tanklock	Fuel filler cap.....			
	5	1	1	118550651/0	Bränslefilter	Fuel filter			
	6	1	1	118550652/0	Oljesticka kpl	Oil cap assy.....			
X	7	1	1	118550734/0	Kåpa- bakre.....	Cover- rear			
	10	1	1	118550653/0	Förgasare kpl.....	Carburettor assy			
	11	1	1	118550482/0	Förgasardistans.....	Spacer.....			
	12	1	1	118550654/0	Primerpump kpl.....	Air pump assy.....			
	13	1	1	118550621/0	Packningssats	Engine gasket set			
	14	1	1	118550484/0	Isolering- förgasare	Carburettor insulator.....			
	21	1	1	118550493/0	Reglagestång.....	Governor rod.....			
	22	1	1	118550492/0	Fjäder.....	Throttle return sprin.....			
X	23	1	1	118550641/1	Reglage kpl.....	Governor assy.....		Inkl. pos 24	
	24	1	1	118550642/0	• Brytare.....	• Engine stop switch.....			

AGROSAL

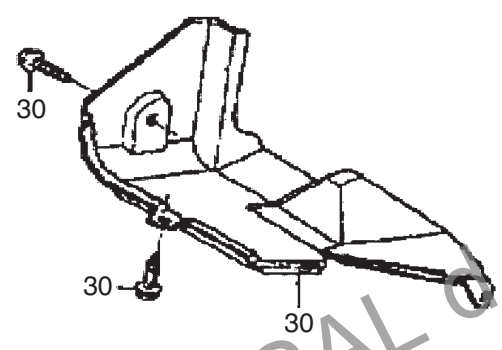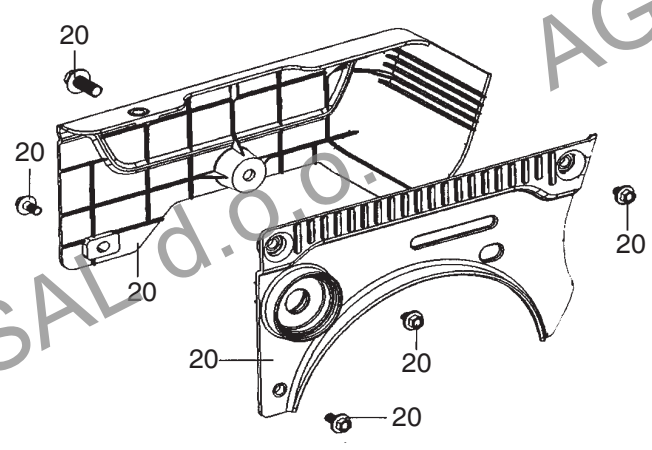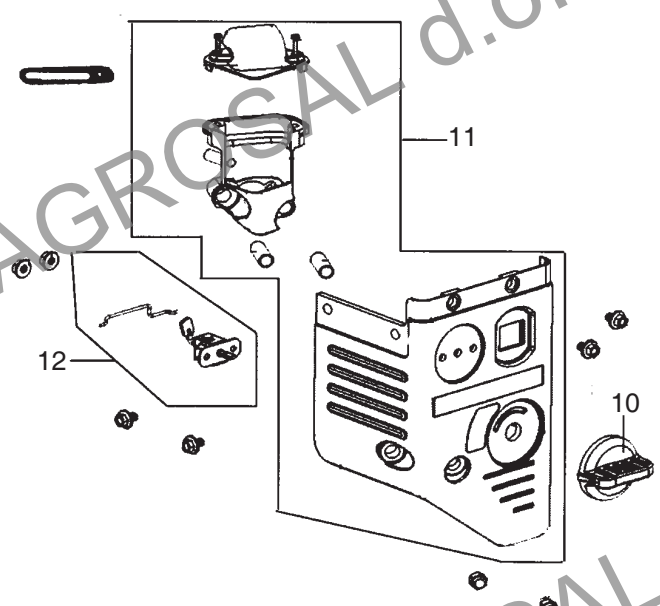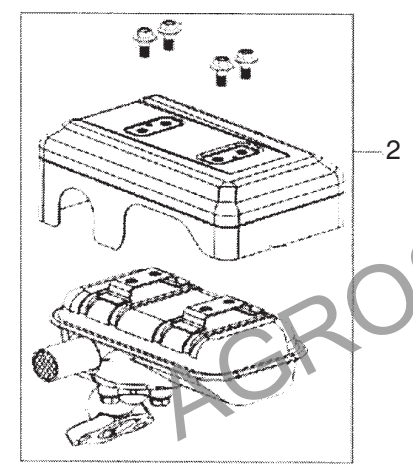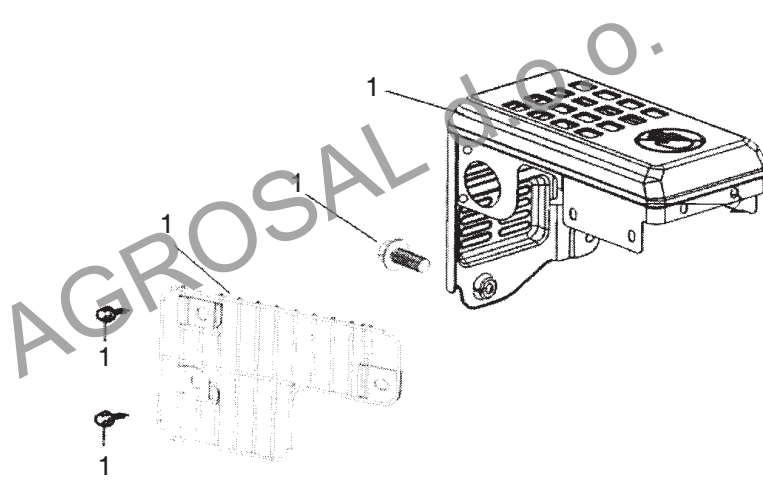

AGROSAL

Utgåva Issue		Bildnr Picture No		GGP MOTOR SM 70		GGP ENGINE SM 70		Sida Page	
2011-14		2837						130	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	Anmärkning Notes	
	SM70 man	SM70 el							
X	1	1	1	118550646/1	Ljuddämparskydd.....	Muffler protector.....			
	2	1	1	118550647/0	Ljuddämpare kpl.....	Muffler assy.....			
	10	1	1	118550643/0	Chokereglage.....	Choke lever.....			
	11	1	1	118550644/0	Luftrenare kpl.....	Air cleaner assy.....			
	12	1	1	118550645/0	Choke kpl.....	Choke assy.....			
	20	1	1	118550655/0	Motorkåpa kpl.....	Engine cover kit.....			
	30	1	1	118550637/0	Skyddsplåt kpl.....	Shroud assy.....			